

Gen2 (99/00) Subaru ECU

B136 (blue)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22			23	24	25
26	27	28	29			30	31	32

1	Mass Air Flow sensor
7	MAP sensor
10	DPS sensor (Legacy B4 TT)
19	Intake Air Temperature
20	Throttle position sensor
21	Lambda sensor
8	Power supply +12v
9	Power supply +12v
17	Power supply GND
18	Power supply GND
12	Sensors power +5v
24	Sensors GND
31	MAF GND

B135 (gray)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22			23	24	25
26	27	28	29			30	31	32

1	FlexFuel sensor
4	Map select input
10	Blower switch
11	A/C switch
13	Read memory connector
14	RPM signal output
19	Defogger switch
21	Light switch

B134 (black)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22			23	24	25
26	27	28	29			30	31	32

1	Fuel pump (with immo)
21	Fuel pump (without immo)