

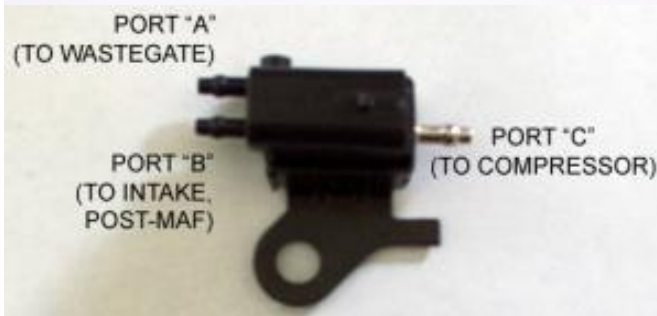
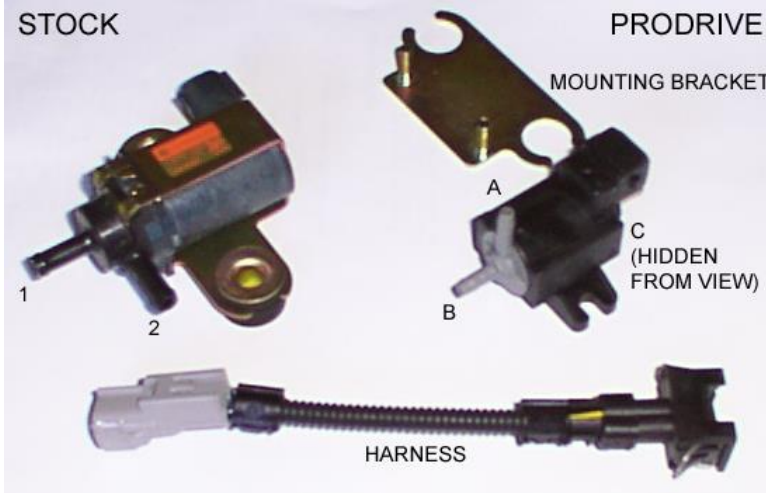


3 Port Boost Solenoids

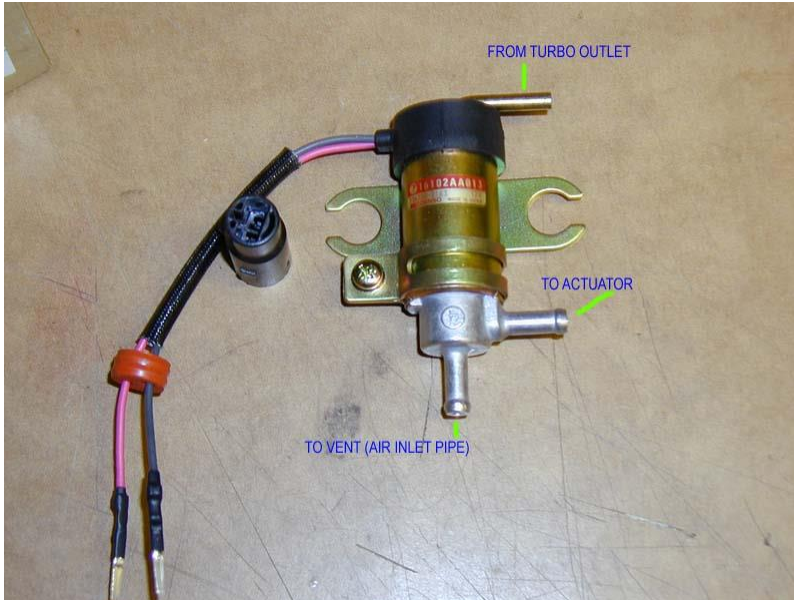

A = WASTEGATE
B = INTAKE
C = COMPRESSOR

External Wastegate Plumbing

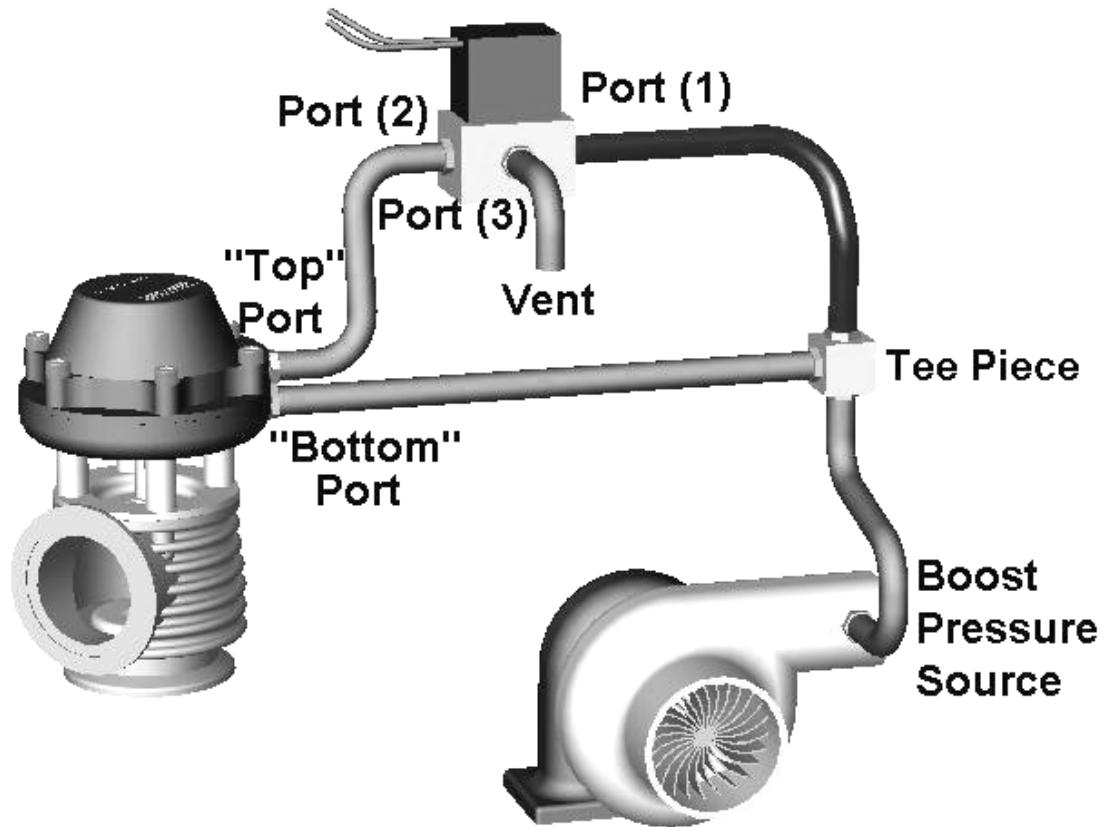

Above diagram is for Haltec/Turbosmart solenoid.

For AVCR solenoid:

- Port (1) = NC
- Port (2) = COM
- Port (3) = NO